


# TREIMCO®

## Installation Guidelines for TremLock Coping (Parapets 6" through 32") Factory Mutual Approved

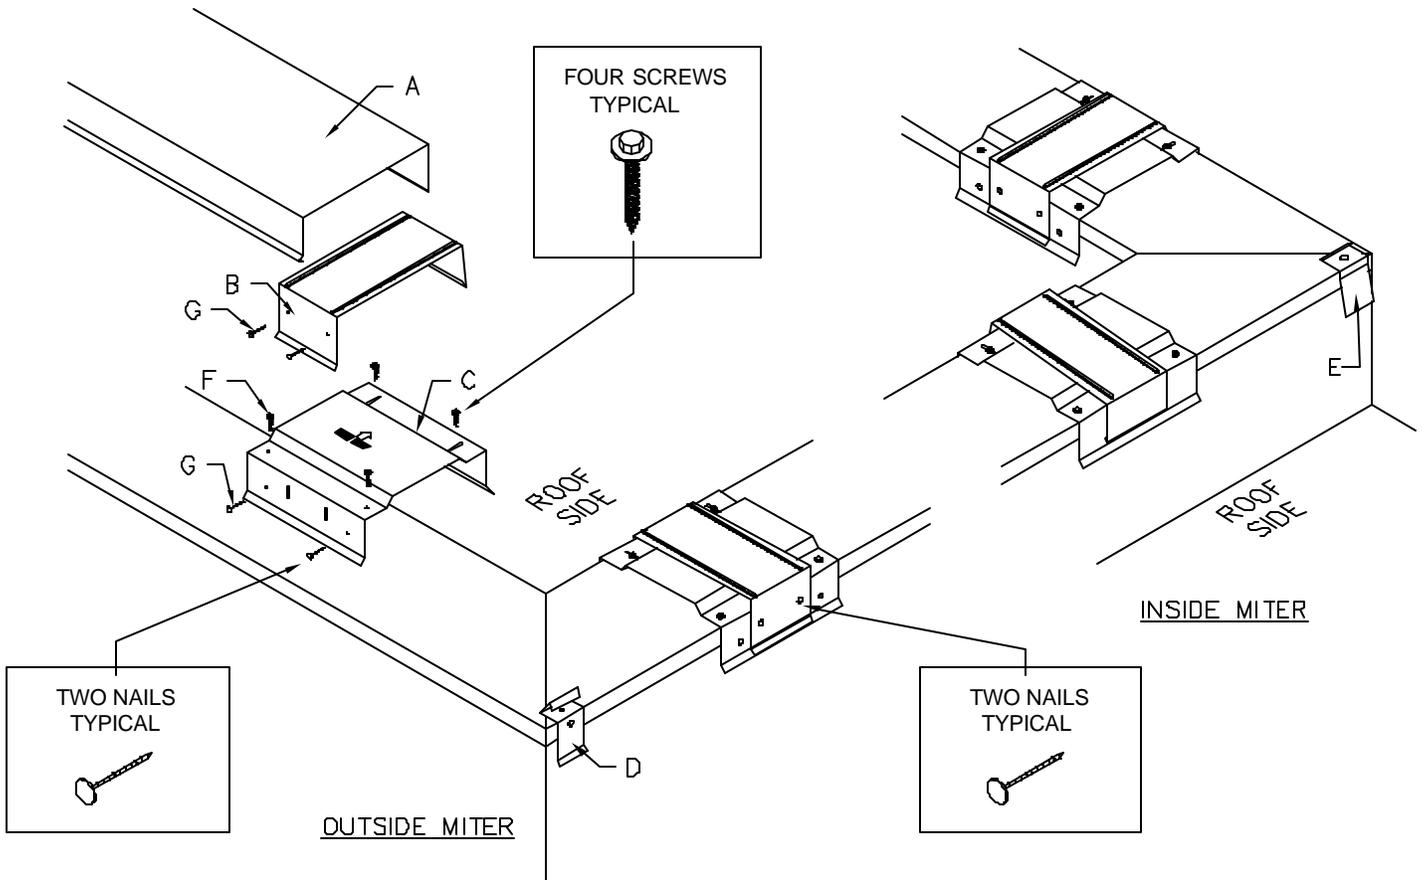

A. Formed Coping Cap  
10'-0" (305cm) Lengths

B. Concealed Joint Splice  
6" (16cm) Wide at Each Cleat      Location

C. Galvanized Steel Coping Clip  
12" (30cm) Wide at 60" (152cm) On  
Center  
(Walls 17"-24" Require 40" (102cm) On  
Center)

D. Outside Corner Support  
Used to Support Outside Corners

E. Inside Corner Support  
Used to Support Inside Corners

F. 1 ¼" Hex Head Screw with  
Neoprene Washer  
Four (4) Per Cleat Top  
(Required)

G. 1 ½" Ring Shank Nail  
Four (4) Per Cleat Face  
(Required)