
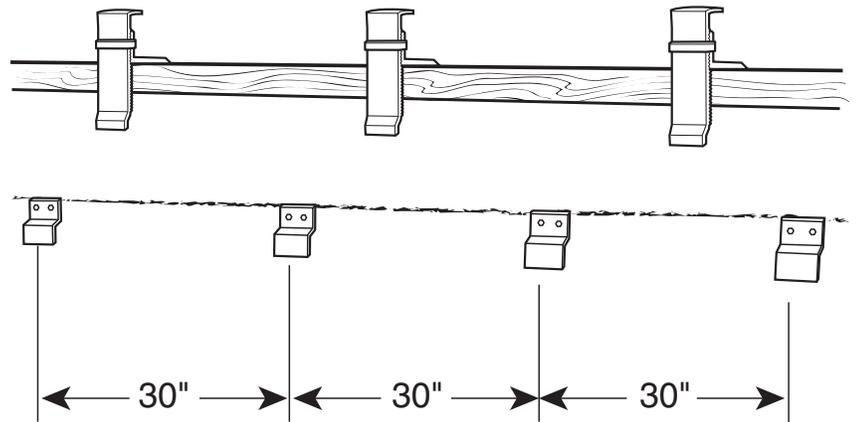



**1.** Assemble the Tremline Deck Bracket Units as illustrated in the Tremline Installation Procedure.

**2.** Once Deck Brackets are assembled starting at corners, set Template under Fascia Holder allowing 1/4" gap between bottom of Fascia Holder and Extender.

Using Template, mark position of Extender Clip, then chalk line. Attach Extender Clips every 30" between Fascia Holders.

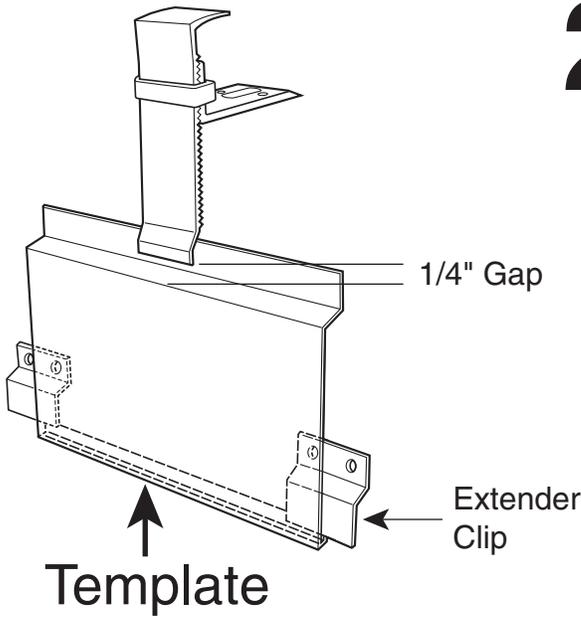


**3.** Once Clips are installed, lock Fascia Extender to bottom of Extender Clips and slide Fascia Extender under Fascia Holder and fasten.

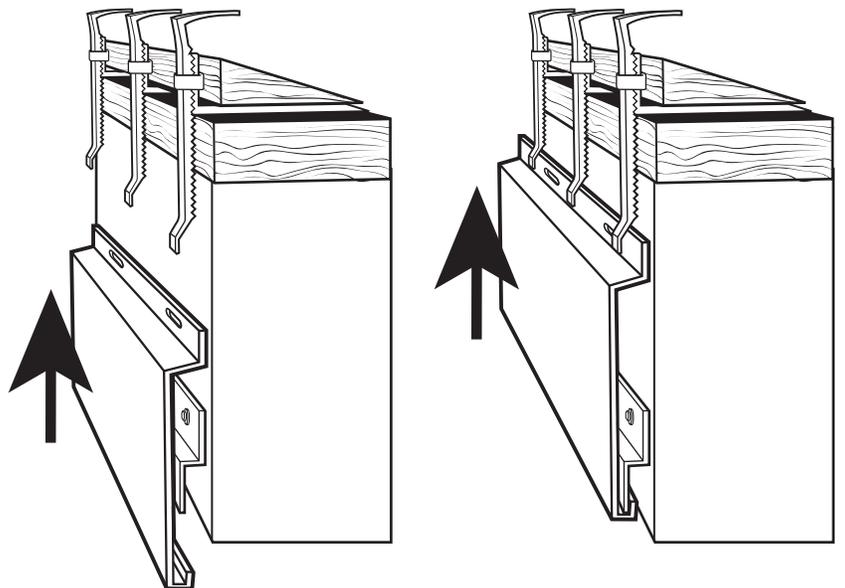

# 4.


Slide Joint Plate into growing end before Extender is completely fastened. (Do not fasten through Joint Plate)

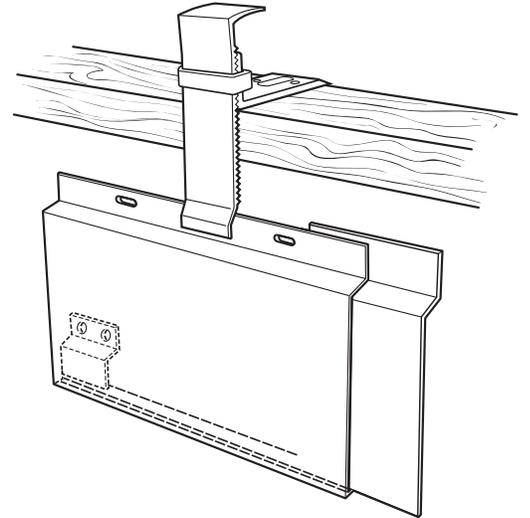

# 5.



Adjust Fascia Holder to allow 1/4" gap between top of Fascia Extender and bottom of Fascia Holder.

Allow 1/4" gap between each Extender Section & the Joint Plate.

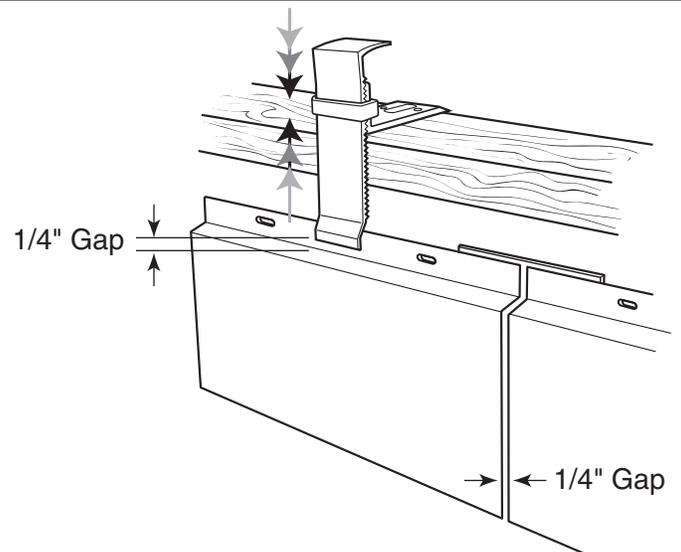

# 6.

Once all Fascia Holders are adjusted, slide Tremline Fascia in between Fascia Extender and Fascia Holder. Pull upward and snap into top of Fascia Holder.

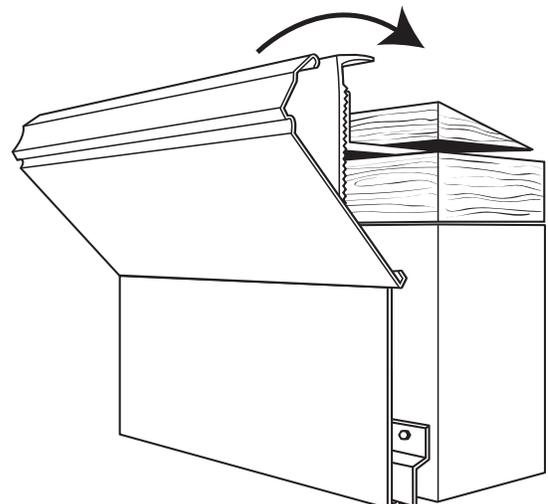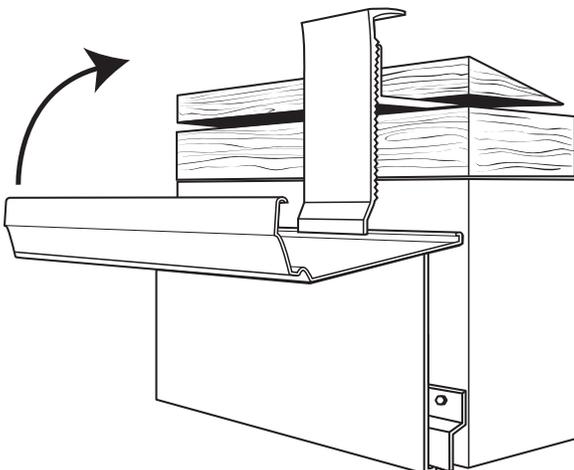

- 7.** Once Extenders & Fascia are installed, refer to TremLine® Installation Procedures to complete Flashing & Fascia System.

